NDB EMT	APP CRS	Rwy Idg	N/A
359	258°	TDZE	N/A
		Apt Elev	296

NDB or GPS-C
EL MONTE (EMT)

T A When local altimeter setting not received, use Ontario Intl altimeter setting.

MISSED APPROACH: Climbing left turn to 2500 via heading 070° and PDZ R-278 to ADAMM Int, then continue climb to 4000 to PDZ VORTAC.

ATIS	SOCAL APP CON	EL MONTE TOWER ★	GND CON	UNICOM
118.75	125.5 318.2	121.2 (CTAF) L	125.9	122.95

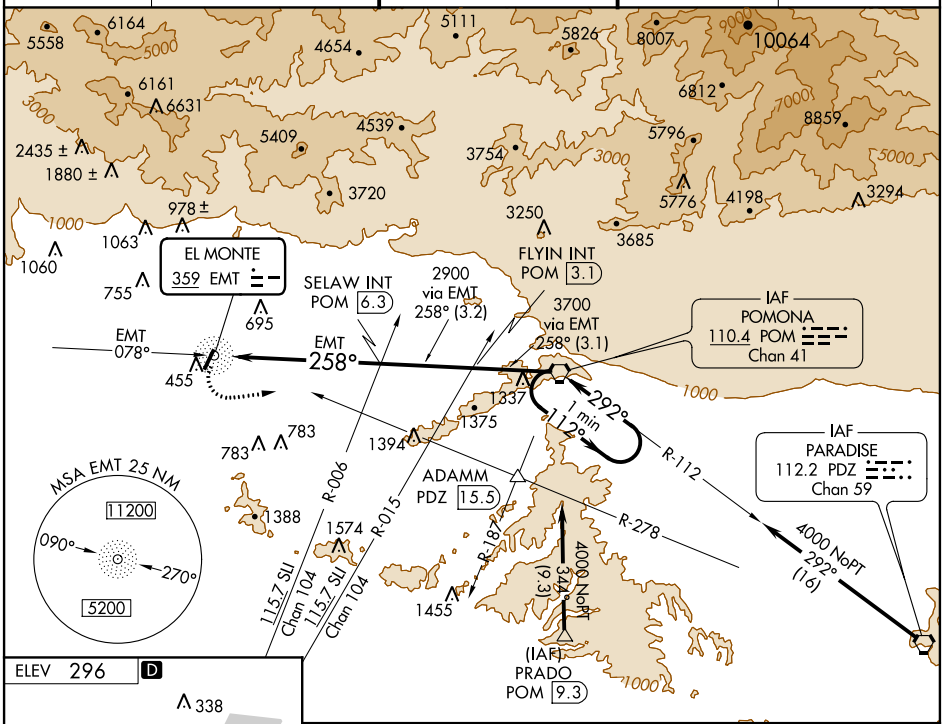

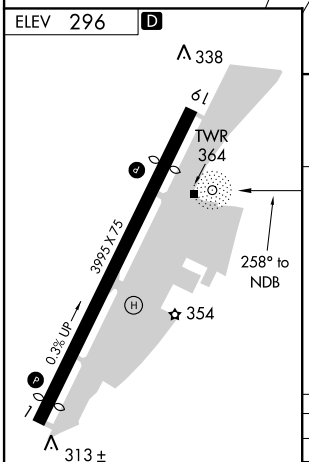

2500 hdg 070°	PDZ R-278	ADAMM	4000	PDZ

One Minute Holding Pattern

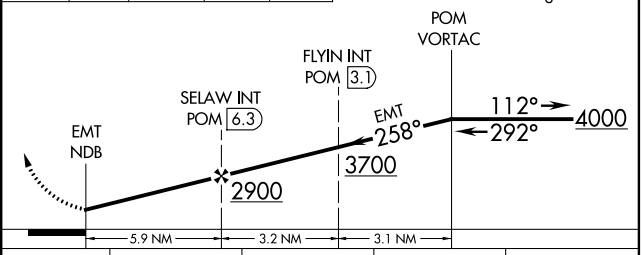

CATEGORY	A	B	C	D
CIRCLING	1200-1¼ 904 (1000-1¼)		NA	
ONTARIO INTL ALTIMETER SETTING MINIMUMS				
CIRCLING	1340-1¼ 1044 (1100-1¼)	1340-1½ 1044 (1100-1½)	NA	

SW-3, 24 JUL 2014 to 21 AUG 2014
SW-3, 24 JUL 2014 to 21 AUG 2014